REP-REP-RAE8764-6431081 Removing and installing/replacing microfilter housing (upper section)

VIN: XXXXXXX Vehicle: X'/E84/OFF-ROAD VEHICLE/X1


28i/N20/AUTO/USA/LL/2013/09

System **3.48.20.13322** Data **R3.48.20.13322**

Version: Version:

64 31 081

Removing and installing/replacing microfilter housing (upper section)

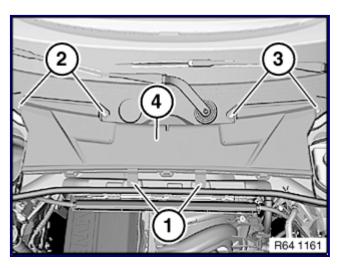

Note:

Example shown on E87:


Release screws (1).

Unfasten screws (2 and 3).

Remove upper section of microfilter housing (4).

Installation note:

Make sure upper section of microfilter housing (4) is correctly seated.

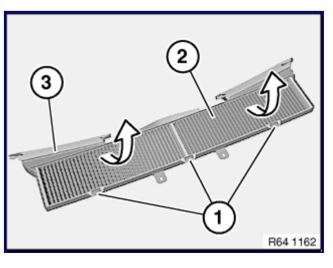

Replacement:

Release catches (1).

Release microfilter (2) in direction of arrow from upper section of microfilter housing (3).

Installation note:

Make sure microfilter (2) is correctly fitted.